



# BD10 SFX Conversion Manual and Set-up

Qty.	Nr.	Name
1	SFXY-MM1	Motormount
2	SFXY-TDN	Narrow Topdeck
2	SFX-TDS	Topdeck Screw
8	SFXY-S1	3x6x1mm Shim

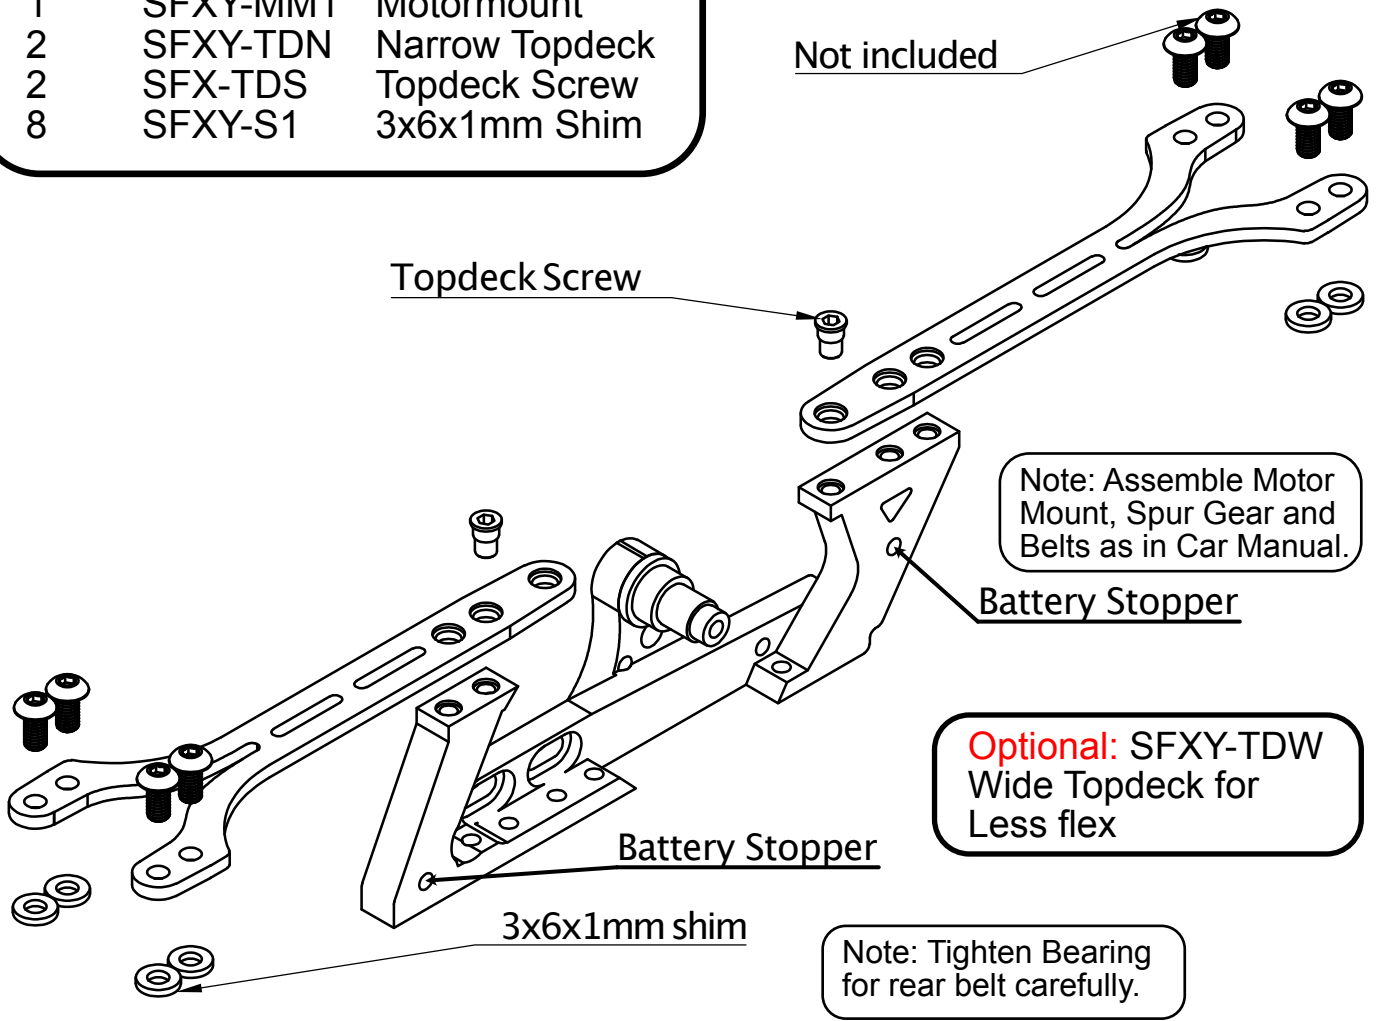

## Flex Set-up Sheet

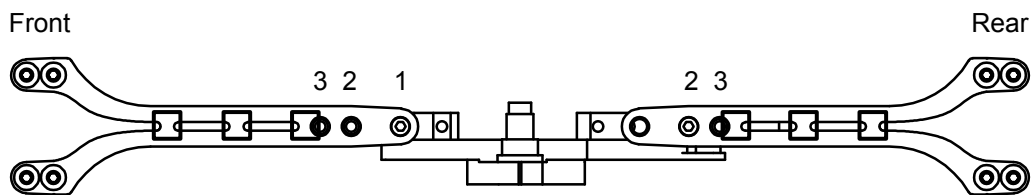

- SFXY-TDN Narrow Topdeck
- SFXY-TDW Wide Topdeck


Notes:




# BD10 SFX Conversion Tips and Tricks

## Tips and Tricks

### Screws

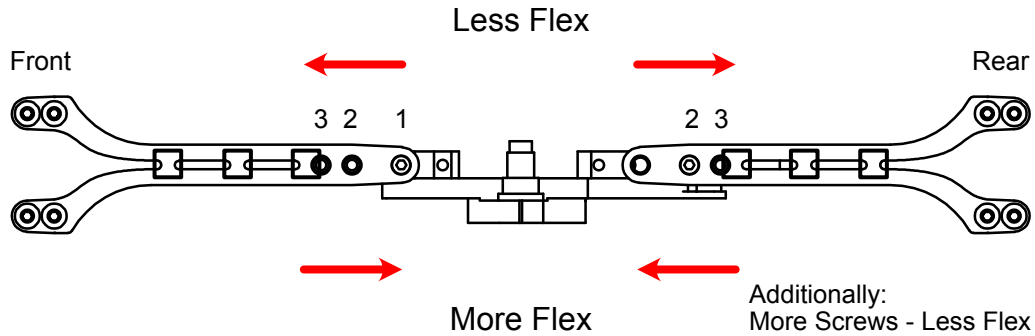


### Cutouts

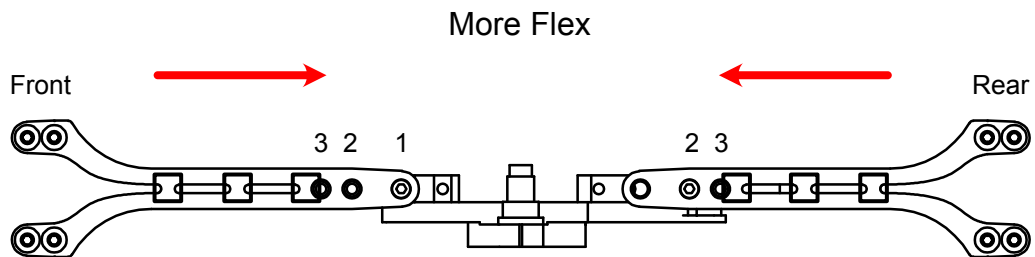


### Topdecks

- More Flex  **SFXY-TDN Narrow Topdeck**
- Less Flex  **SFXY-TDW Wide Topdeck**

### Standard Setting

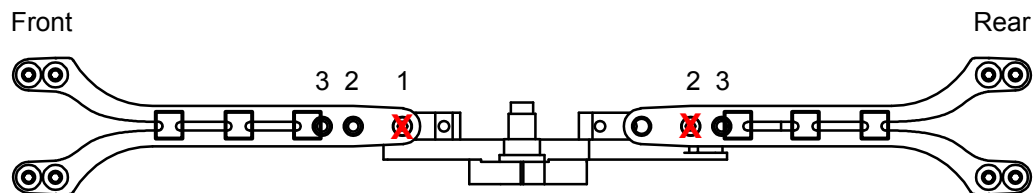

**SFXY-TDN Narrow Topdeck**

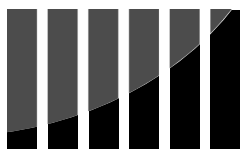

Low to High Grip

